

## Plenum Chamber Cover


### Removing

- Remove the seal -7-.
- Lift the plenum chamber cover -3- far enough so that the frame -4- is above the air intake shroud -5- for the fresh air blower.
- Remove the plenum chamber cover from the cowl panel -6-.



#### Note

*The tab -2- over the cover -1- will get damaged if the seal is not removed.*

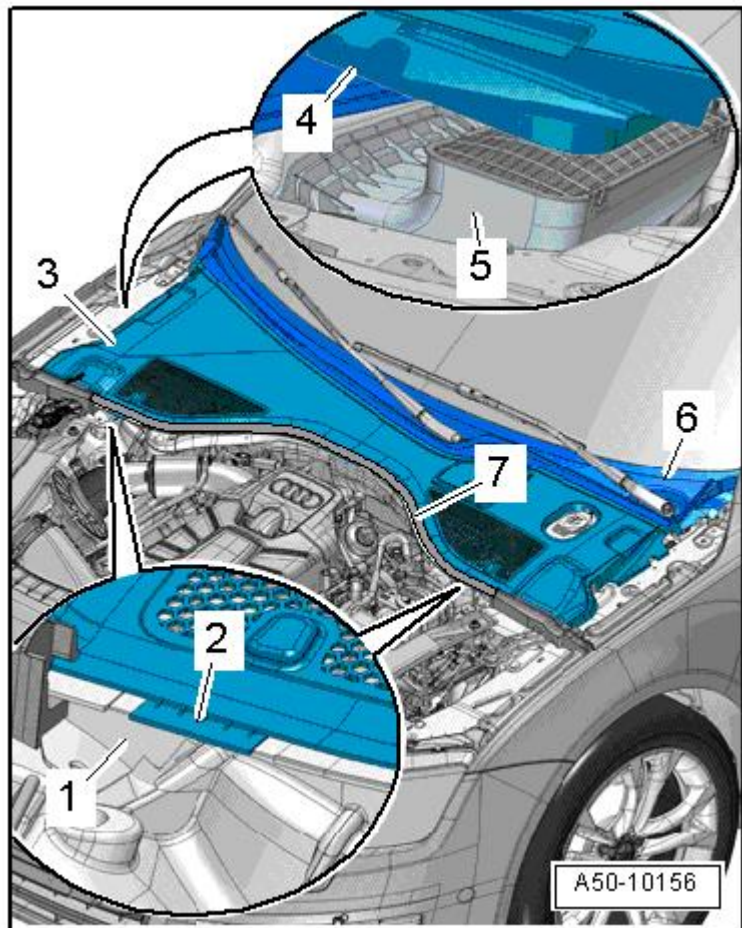

### Installing

Install in reverse order of removal. Note the following:



#### Note

- ♦ *Be careful not to damage the plenum chamber cover -2- and the plenum chamber cover with frame -5- for the air intake shroud -4- to prevent water from getting into the air conditioner when the plenum chamber cover is installed -1-.*
- ♦ *The plenum chamber cover cowl panel must lock completely into the windshield frame -3-.*
- ♦ *The plenum chamber cover must be installed correctly and completely into the mount -arrow- for cowl panel.*

