### Maserati 3.0 V6 Biturbo



The product described in the guidance was developed, manufactured and controlled considering the necessary safety reguirements.

The product must be installed properly to ensure a proper function and avoid danger for persons and things.

Please read this installationguide inclusive safety instructions carefully.

### Scope of supply:

| Quantity | article       |
|----------|---------------|
| 1x       | Tuningbox     |
| 1x       | loom          |
| 1x       | Bridge plug   |
| 1x       | Fastening kit |



- 1. Open the hood.
- 2.Turn the ignition off!
- 3. Remove the ignitionkey!
- 4. Close and lock all doors!
- 5.Do not open any doors while installing the tuning-kit!
- 6. Wait 5 minutes before beginning the installation








In order to avoid damages at electronic vehicle components, you have to be sure that you have done all necessary methods for **electostatic discharge** .

Install the electronic in an waterproof and vibrationless place. Do not make any changes at the tuningkit!

Do not expand or shorten the loom.

### Maserati 3.0 V6 Biturbo



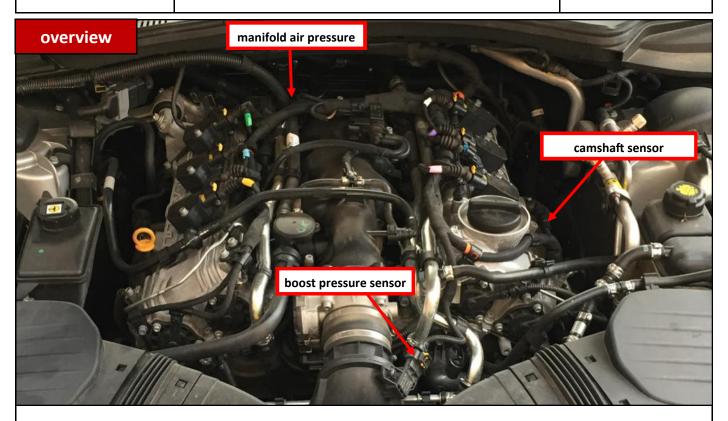

### overview:

#### The chiptuning box is attached to the following points:

- manifold air pressure
- camshaft position sensor
- boost pressure sensor

#### **Necassary tools:**

cutter

#### **Preparation:**


- Move the individual strands of the cable loom to the associated plug connectors
- Put the necessary tool for the side (if needs)
- Put the mounting material to the side
- To reach the maximum power min. Super Unleaded (98 RoZ) or better has to be refueled

## Maserati 3.0 V6 Biturbo




1. manifold air pressure

sensor.

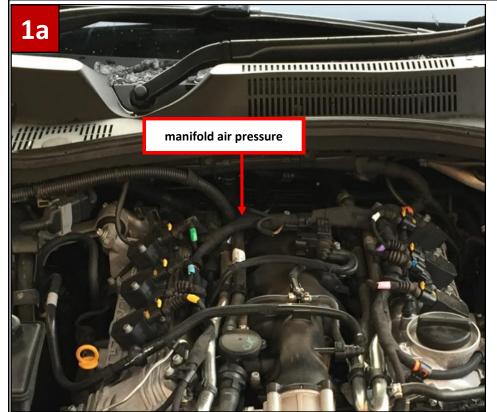

- ♦ Disconnect the plug from the manifold air pressure
  - Plug the provided cable loom between the now separated connectors.
  - Onnect the plug of the new loom to the rail pressure sensor.

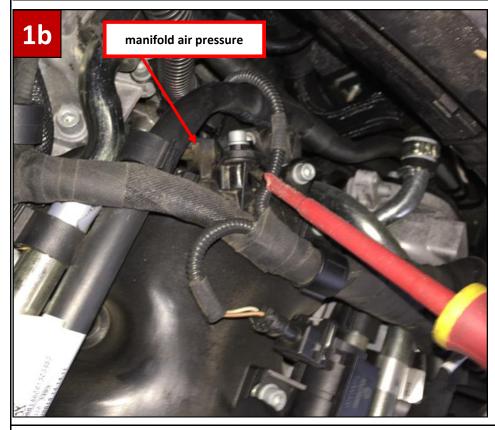

## Maserati 3.0 V6 Biturbo






#### 2. camshaft sensor

- ♦ Disconnect the plug from the camshaft sensor.
- Plug the provided cable loom between the now separated connectors.
- ♦ Connect the plug of the new loom to the camshaft sensor.




## Maserati 3.0 V6 Biturbo



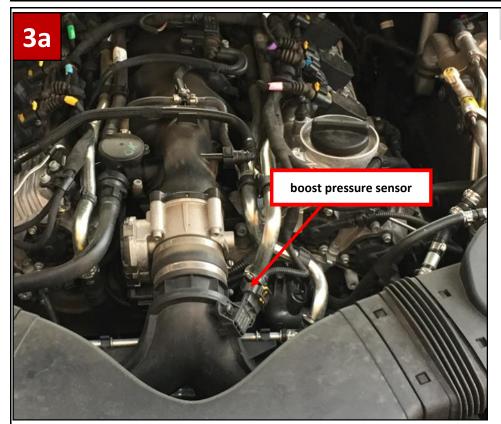


### 3. boost pressure sensor

- ♦ Disconnect the plug from the boost pressure sensor.
- Plug the provided cable loom between the now separated connectors.
- Oconnect the plug of the new loom to the boost pressure sensor.

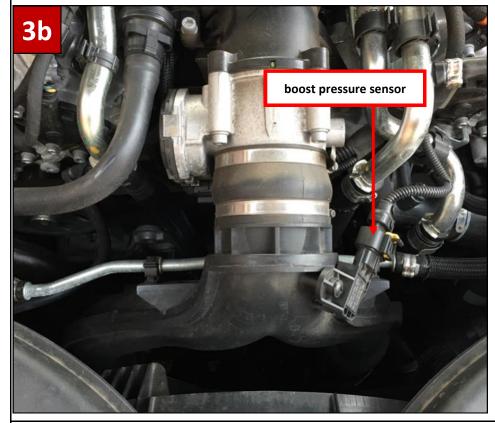


## Maserati 3.0 V6 Biturbo



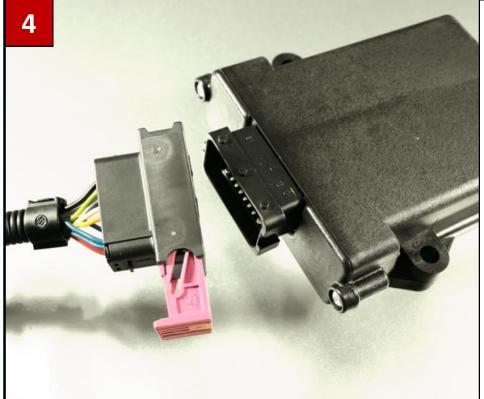

#### 4. tuningbox

- ♦ Finally install the cable towards a suitable position
- ♦ The plugs must be engage, so that a safe connection is ensured
- ♦ Fix the cable with cable ties
- ♦ Connect the tuningbox to the new loom

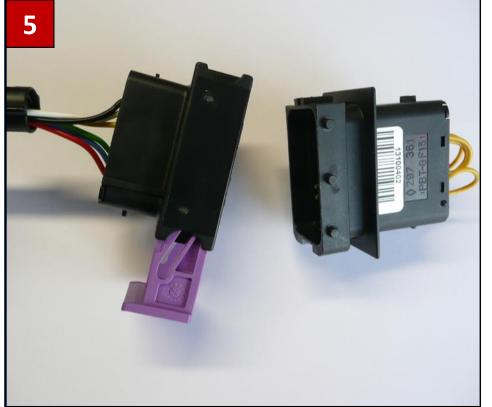

#### 5. jumper plug

- ♦ By using the jumper the vehicle is put in the original condition.
- ♦ As soon as you connect the cable loom with the jumper plug the car is in original condition.