

# EINBAUANLEITUNG

Ferrari California T



14110244


The product described in the guidance was developed, manufactured and controlled considering the necessary safety requirements.

The product must be installed properly to ensure a proper function and avoid danger for persons and things.

Please read this installationguide inclusive safety instructions carefully.

## Scope of supply:

Quantity	article
1x	Tuningbox
1x	loom
1x	Bridge plug
1x	Fastening kit

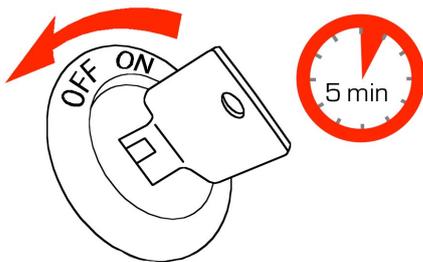

1. Open the hood.
2. Turn the ignition off!
3. Remove the ignitionkey!
4. Close and lock all doors!
5. Do not open any doors while installing the tuning-kit!
6. Wait 5 minutes before beginning the installation



In order to avoid damages at electronic vehicle components, you have to be sure that you have done all necessary methods for **electrostatic discharge** .

Install the electronic in an **waterproof** and **vibration-less** place. Do not make any changes at the tuning-kit!

Do not expand or shorten the loom.


# EINBAUANLEITUNG

Ferrari California T



14110244

## overview

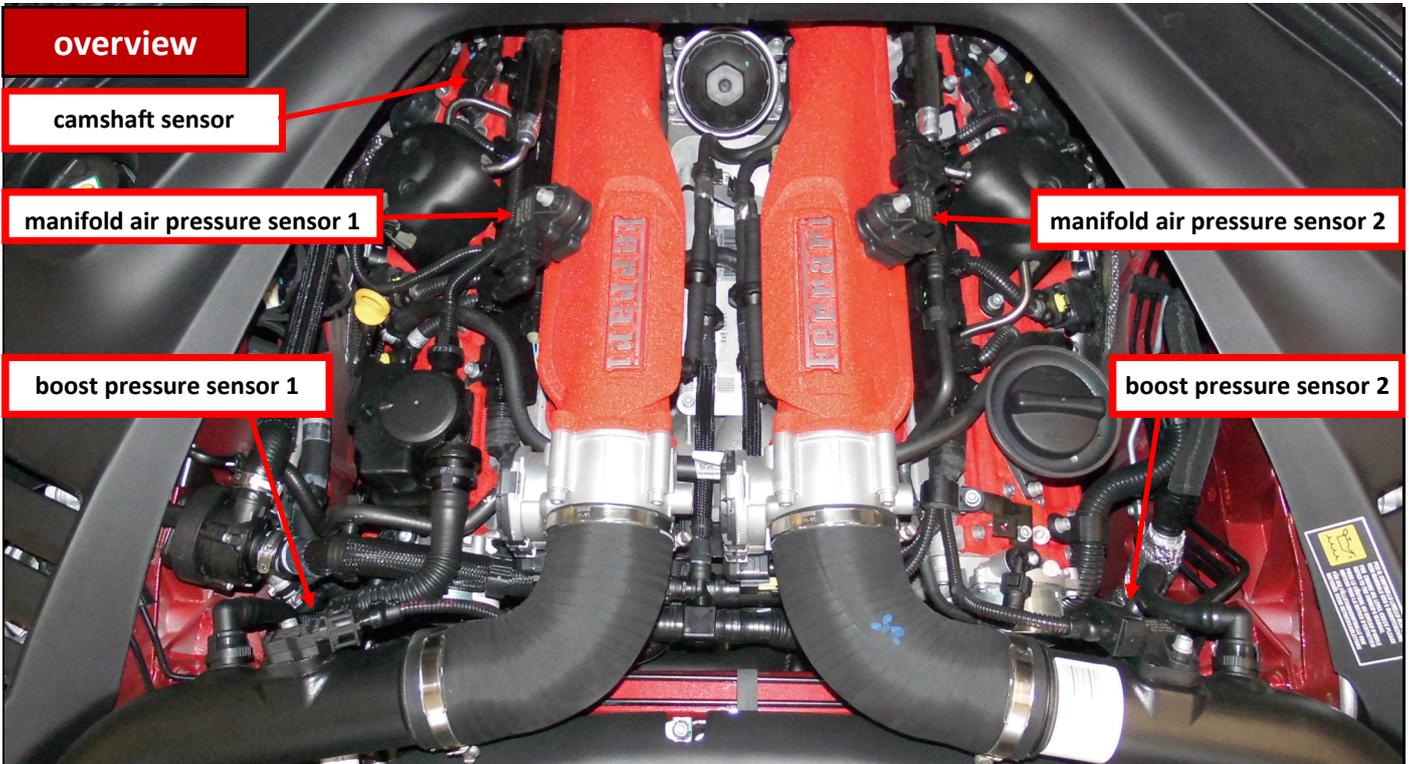

## overview:

**The chiptuning box is attached to the following points:**

- boost pressure sensor
- camshaft position sensor
- manifold air pressure

## **Necessary tools:**

- none

## **Preparation:**

- Move the individual strands of the cable loom to the associated plug connectors
- Put the necessary tool for the side (if needs)
- Put the mounting material to the side
- ***To reach the maximum power min. Super Unleaded (98 RoZ) or better has to be refueled***

# EINBAUANLEITUNG

## Ferrari California T




14110244

1a

boost pressure sensor 1

boost pressure sensor 2

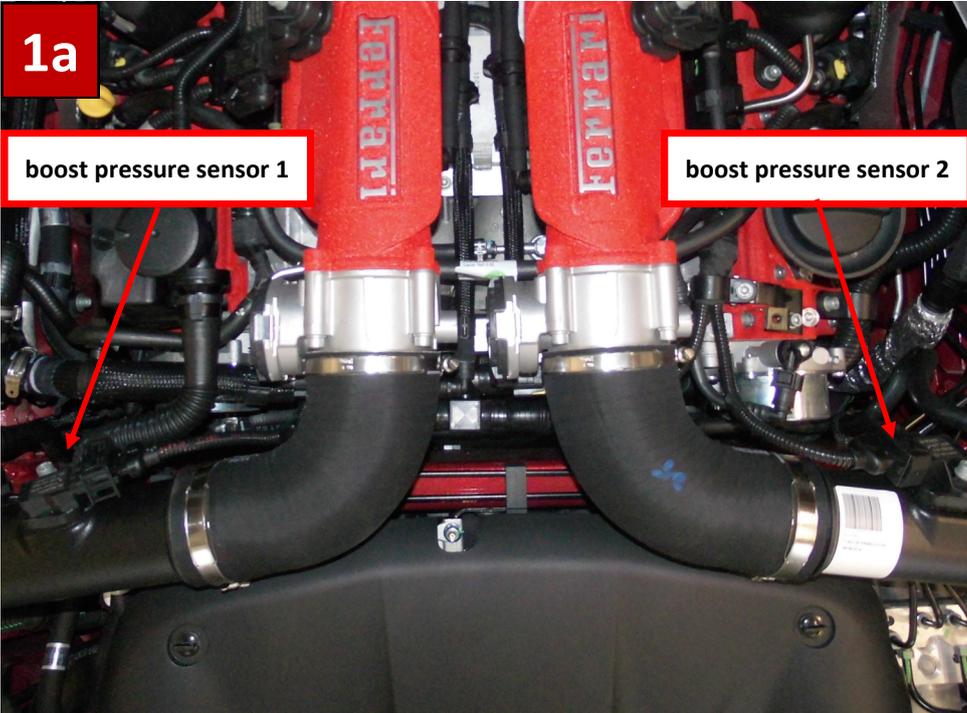


### 1. boost pressure sensor

- ◇ Disconnect the plug from the boost pressure sensor 1 boost pressure sensor 2.
- ◇ Plug the provided cable loom between the now separated connectors.
- ◇ Connect the plug of the new loom to the boost pressure sensor 1 and boost pressure sensor 2.

1b

boost pressure sensor

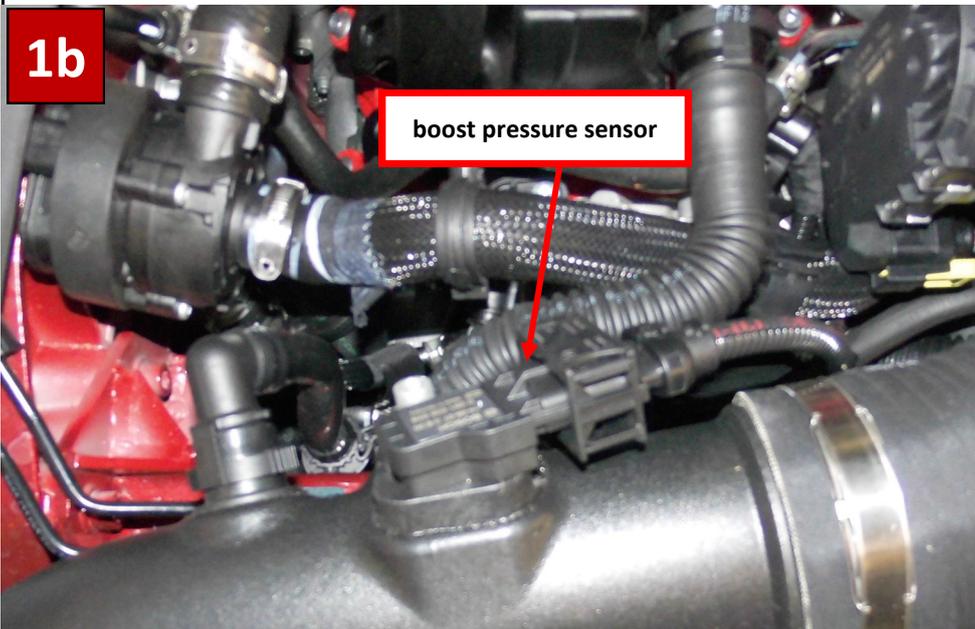


# EINBAUANLEITUNG

Ferrari California T



14110244

2a

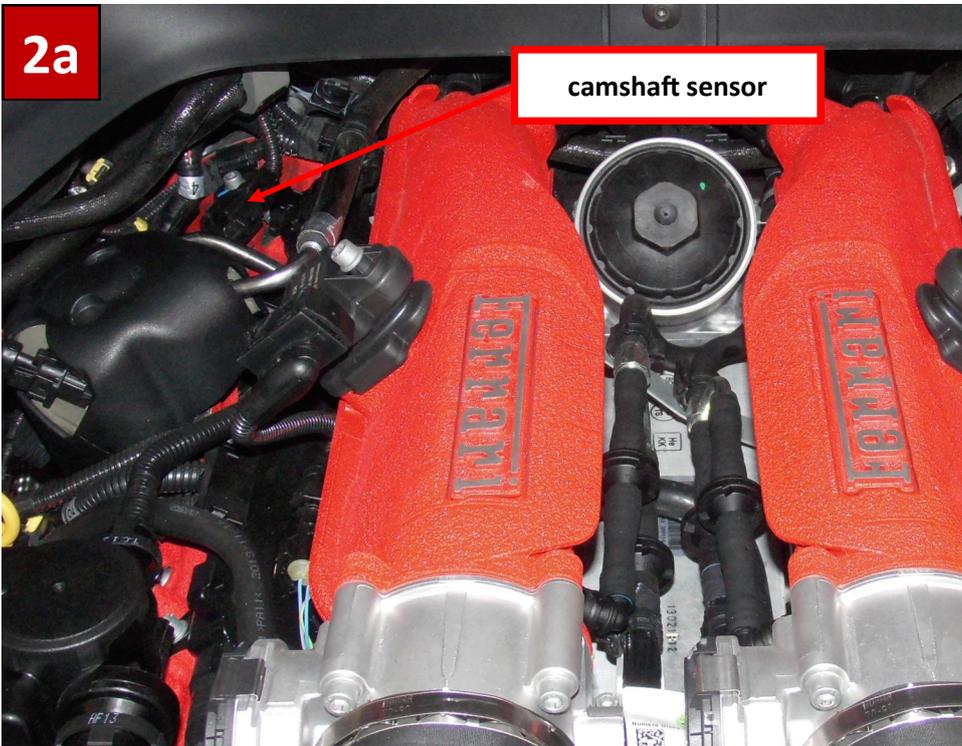


camshaft sensor

## 2. camshaft sensor

- ◇ Disconnect the plug from the camshaft sensor.
- ◇ Plug the provided cable loom between the now separated connectors.
- ◇ Connect the plug of the new loom to the camshaft sensor.

WE ONLY USE ONE (left)  
CAMSHAFT SENSOR!

2b

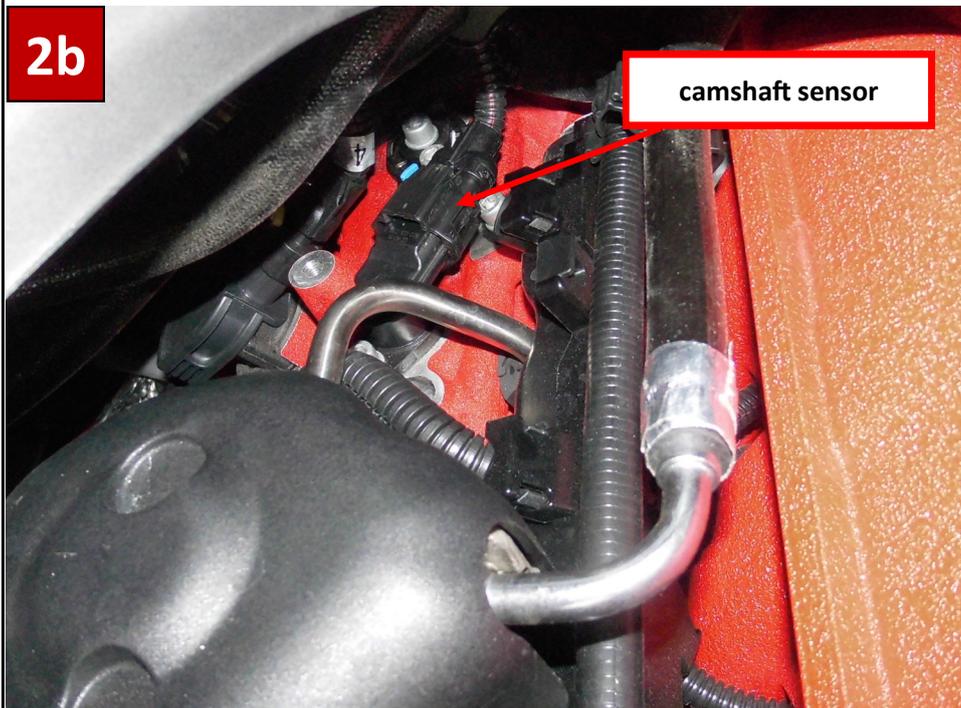

camshaft sensor


# EINBAUANLEITUNG

Ferrari California T



14110244


3a

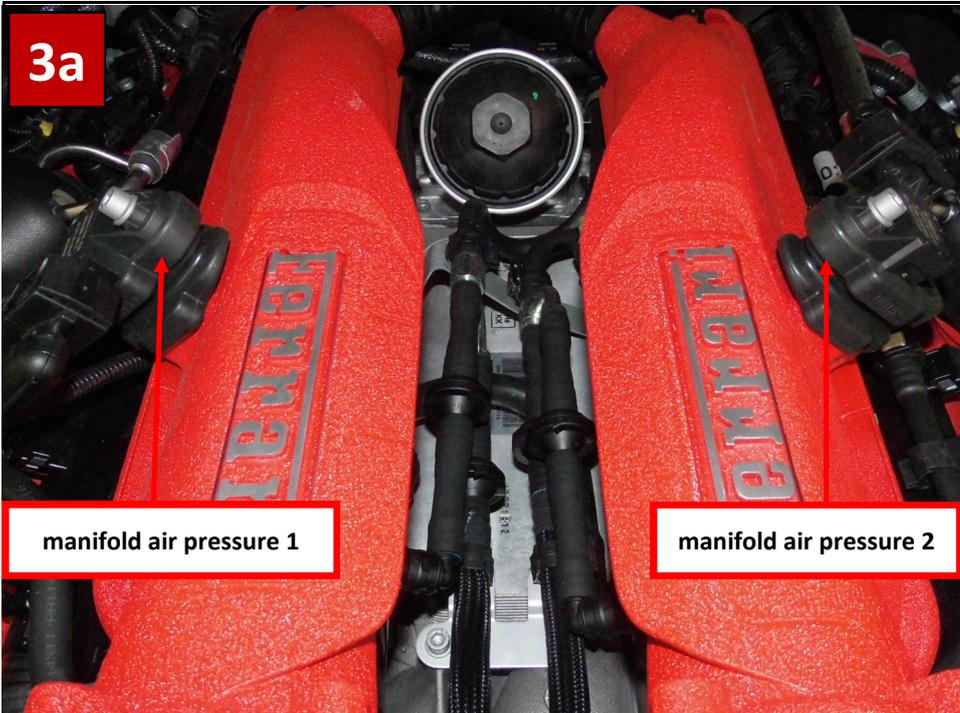

### 3. manifold air pressure

- ◇ Disconnect the plug from the manifold air pressure sensor 1 and manifold air pressure sensor 2.
- ◇ Plug the provided cable loom between the now separated connectors.
- ◇ Connect the plug of the new loom to the manifold air pressure 1 and manifold air pressure sensor 2.

3b

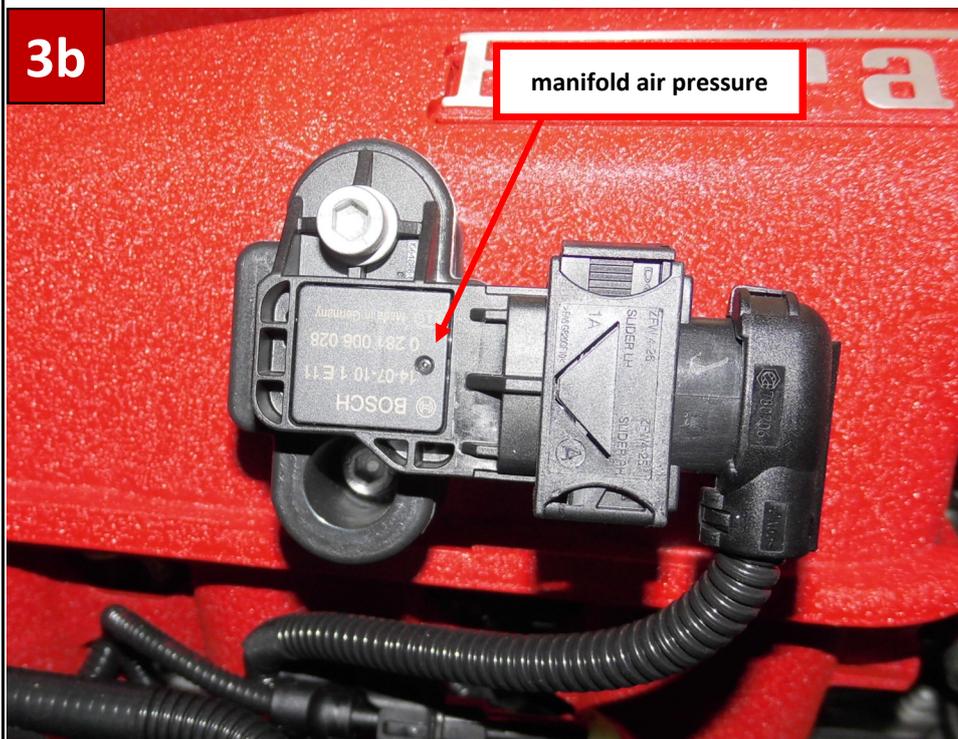


# EINBAUANLEITUNG

Ferrari California T



14110244


4

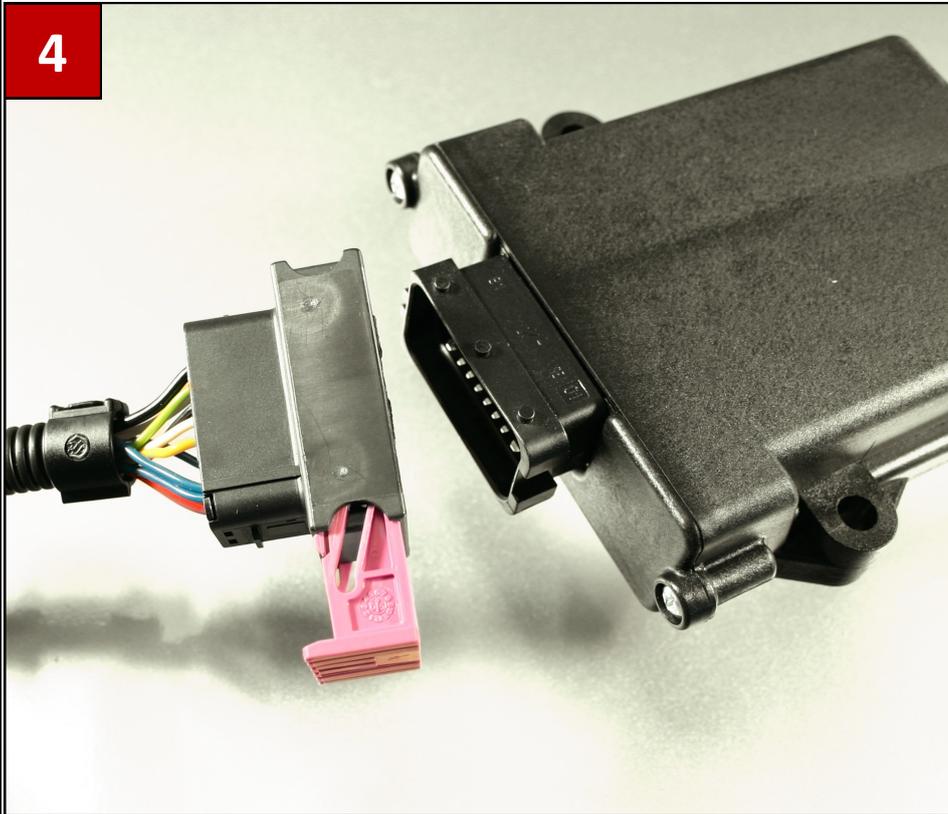

## 5. tuningbox

- ◇ Finally install the cable towards a suitable position
- ◇ The plugs must be engaged, so that a safe connection is ensured
- ◇ Fix the cable with cable ties
- ◇ Connect the tuningbox to the new loom

5

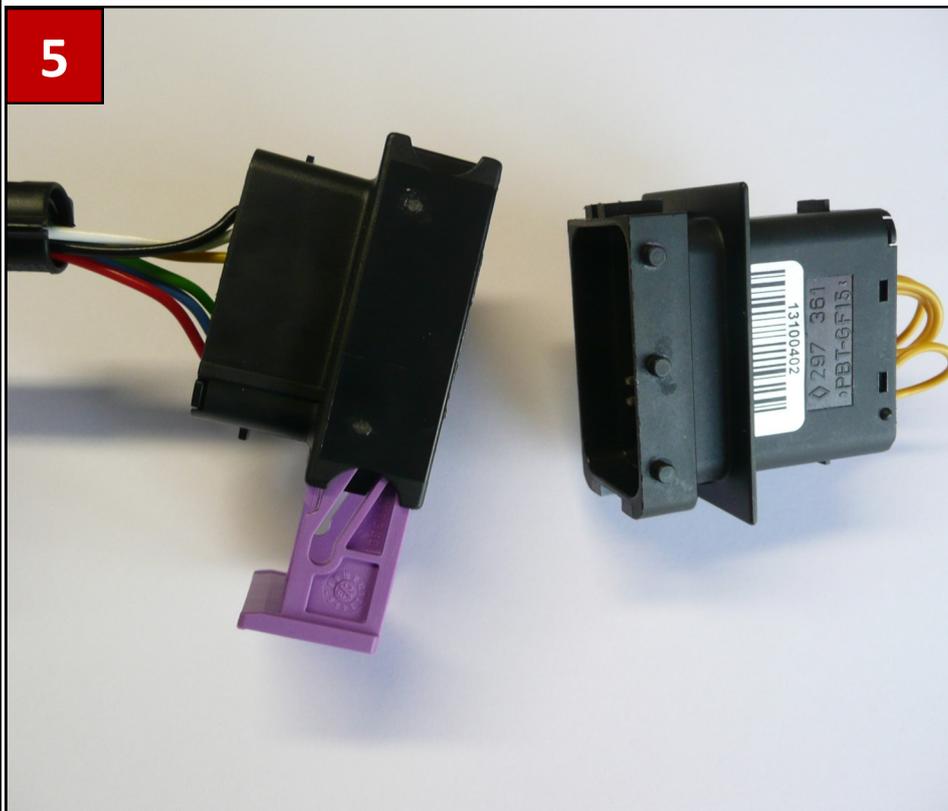

## 6. jumper plug

- ◇ By using the jumper the vehicle is put in the original condition.
- ◇ As soon as you connect the cable loom with the jumper plug the car is in original condition.