

# INSTALLATIONGUIDE

## Porsche 718 Boxster



The product described in the guidance was developed, manufactured and controlled considering the necessary safety requirements.

The product must be installed properly to ensure a proper function and avoid danger for persons and things.

Please read this installationguide inclusive safety instructions carefully.

### Scope of supply:

Quantity	article
1x	Tuningbox
1x	Loom
1x	Bridge plug
1x	Fastening kit



- 1.Open the hood.
- 2.Turn the ignition off!
- 3.Remove the ignitionkey!
- 4.Close and lock all doors!
- 5.Do not open any doors while installing the tuningkit!
- 6.Wait 5 minutes before beginning the installation



In order to avoid damages at electronic vehicle components, you have to be sure that you have done all necessary methods for **electrostatic discharge** .

Install the electronic in an **heat-, waterproof and vibrationless** place. Do not make any changes at the tuning-kit!

Do not expand or shorten the loom.

# INSTALLATIONGUIDE

**Porsche**  
**718 Boxster**



## Overview



### Overview:

The tuningkit has to be attached to the following points:

- **boost pressure sensor**
- **Cam shaft**
- **Inlet manifold sensor**
- **Power supply**

### Preperation:

- Move the individual strands of the loom to the associated plug connectors
- Put the required tools by your side ( if needed )
- Take the fastening material at your side


# INSTALLATIONGUIDE

## Porsche 718 Boxster



14110748

**1a**

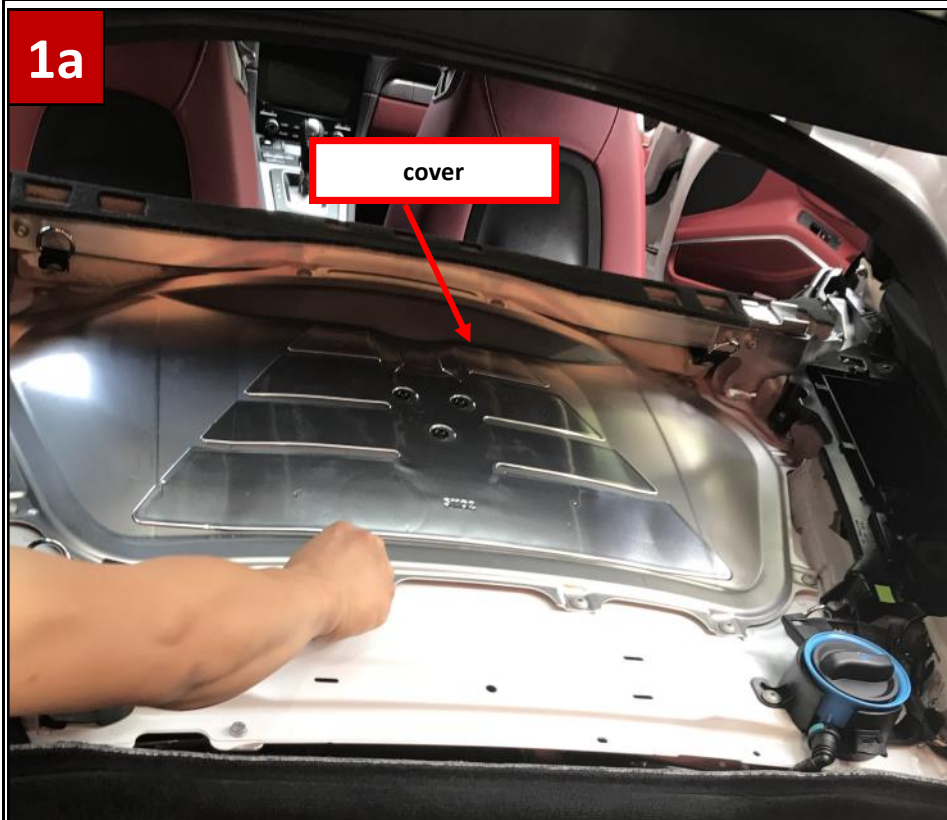

### 1. preparation

Before you can start installing the kit, you have to remove the engine cover.

The engine cover is only clipped

**1b**



# INSTALLATIONGUIDE

## Porsche 718 Boxster



14110748

2

CAMSHAFT SENSOR

### 2. camshaft sensor

Disconnect the plug from the camshaft sensor.

Attach the camshaft sensor plug to the new loom

Connect the plug of the new loom to the camshaft sensor




# INSTALLATIONGUIDE

## Porsche 718 Boxster



**3a**

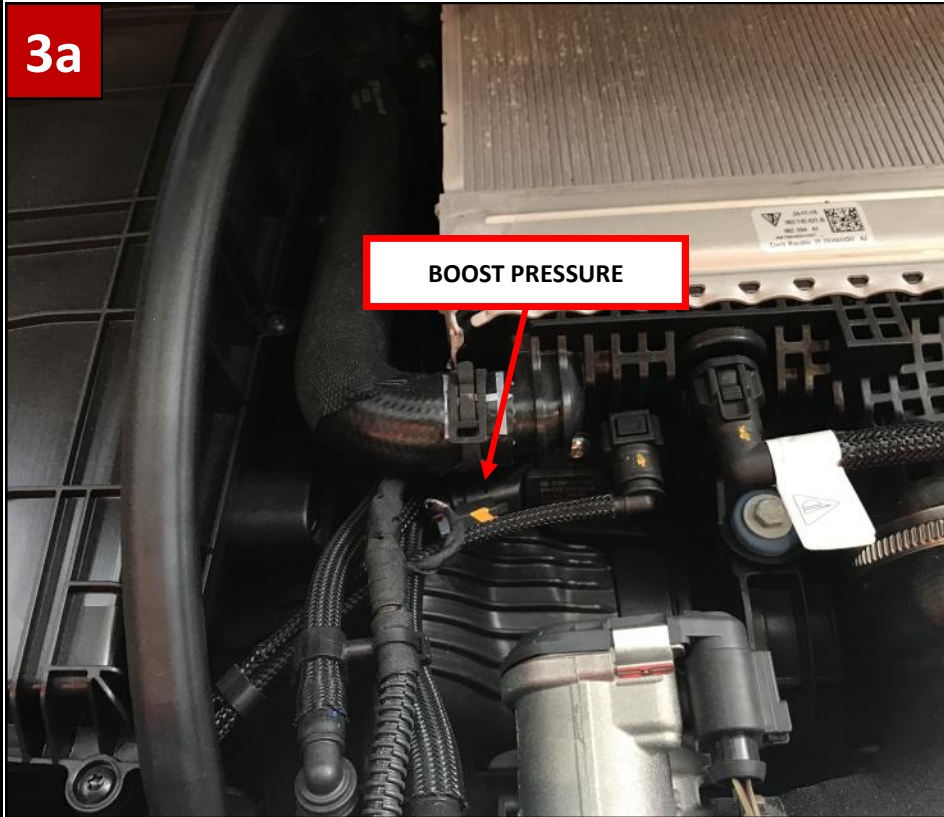


### 3. Boost pressure sensor

Disconnect the plug from the boost pressure sensor

Attach the boost pressure plug to the new loom

Connect the plug of the new loom the boost pressure sensor

**3b**

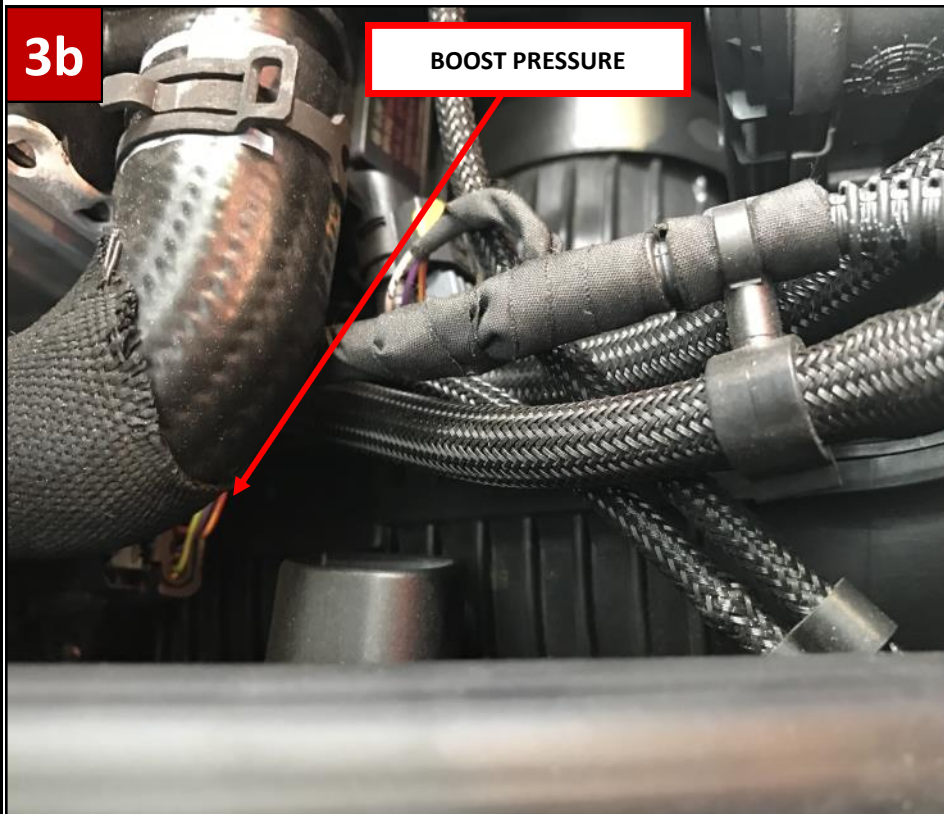


# INSTALLATIONGUIDE

## Porsche 718 Boxster



4

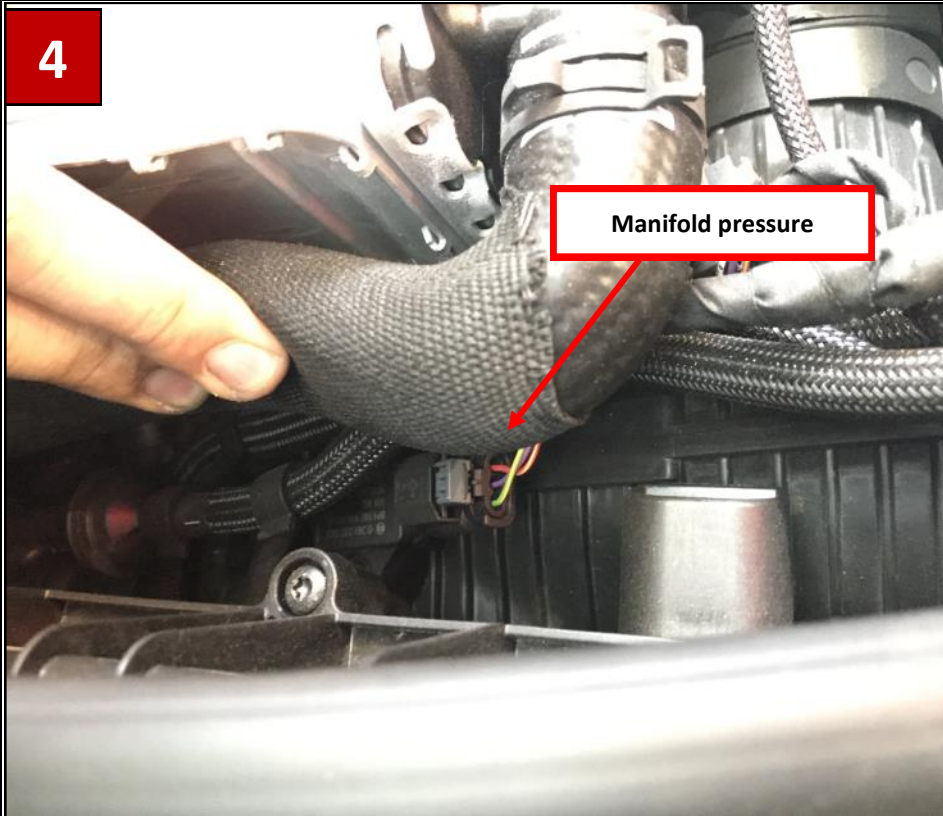

### 4. manifold pressure sensor

Disconnect the plug from the manifold sensor

Attach the manifold plug to the new loom

Connect the plug of the new loom the manifold pressure sensor

# INSTALLATIONGUIDE

## Porsche 718 Boxster



14110748

5a




### 5. Power supply

Connect the red cable of the new wiring harness to the positive pole of the battery.

Connect the black cable of the new harness to the negative (ground) of the car.

5b

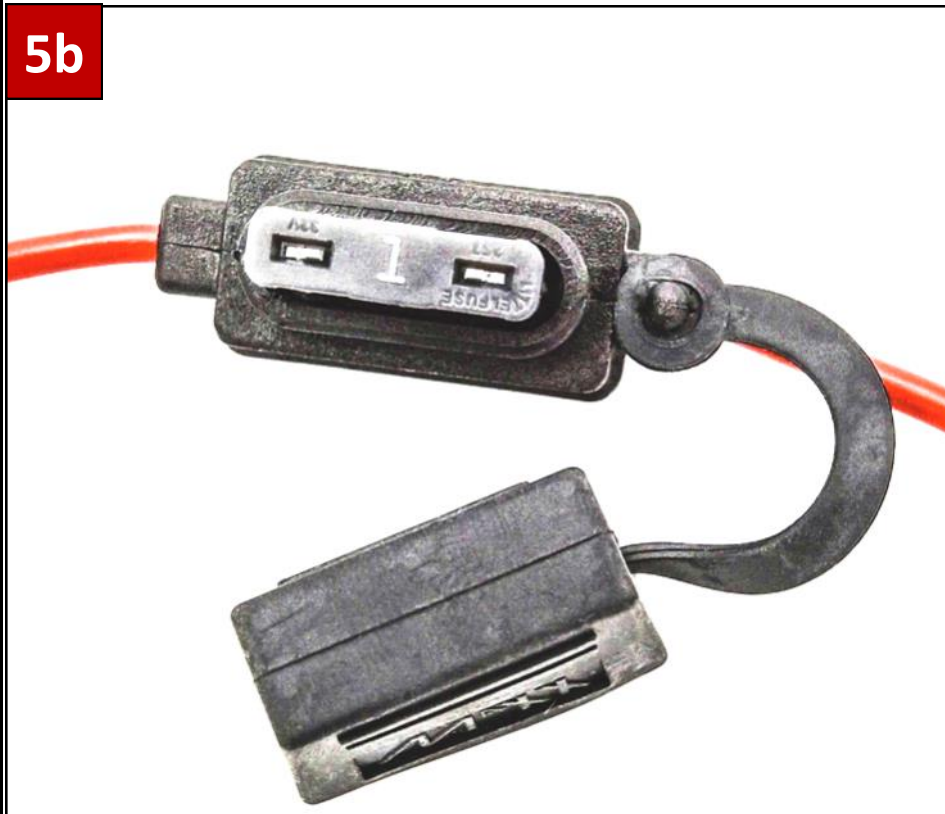

Check the fuse.

# INSTALLATIONGUIDE

## Porsche 718 Boxster



6



### 6. tuningbox

Finally install the cable towards a suitable position

The plugs must be engaged, so that a safe connection is ensured

Fix the cable with cable ties

Connect the tuningbox to the new loom

7




### 7. jumper plug

By using the jumper the vehicle is put in the original condition.

As soon as you connect the cable loom with the jumper plug the car is in original condition.



	<b>INSTALLATIONGUIDE</b>	 14110748
	<b>Porsche</b> <b>718 Boxster</b>	

## FAQ

Error Description:	How to fix this error:
Engine doesn't start	<p>Please check the plug-in connection of the affected sensors, make sure that all sensors are plugged in properly.</p> <p>Make sure that the 12V power supply is connected correctly, if available.</p> <p>Unplug the chiptuning box, plug the bridge connector, and then check whether the error persists.</p>
Engine „jerky“	<p>Check all connections, have you plugged in a plug incorrectly or is it not properly locked?</p>
Car goes immediately into limp mode	<p>Have you removed one of the plugs under current? (Open the hood, close the doors, close and wait for 5 minutes)</p> <p>Please check the wiring harness.</p> <p>Unplug the box, insert the bridge connector, and then check whether the error persists.</p>
Car without power increase	<p>Make sure you are on the correct plugs.</p> <p>Please check the goods for possible damages and compare the item number on the box with the one in the webshop.</p> <p><u>Only gasoline:</u> Make sure you have fueled the right fuel with min Super Plus (98 RoZ) or a higher quality.</p>
Strong soot development in the engine	<p>Only after consultation, change the chip tuning box down by the rotary coding switch by 1 to 2 steps.</p> <p>If you have a chiptuning box with app, set it to "ECO".</p>
Engine has misfire	<p>Please unplug the chiptuning box and plug the bridge plug.</p> <p>Then try again to see if the error still occurs.</p>

# INSTALLATIONGUIDE

<p><b>Porsche</b></p> <p><b>718 Boxster</b></p>
---



# Notice

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins or other markings on the paper.

# INSTALLATIONGUIDE

<p><b>Porsche</b></p> <p><b>718 Boxster</b></p>
---



# Notice

[illegible]

# INSTALLATIONGUIDE

<p><b>Porsche</b></p> <p><b>718 Boxster</b></p>
---



## Notice

[illegible]