


INSTALLATIONGUIDE


BMW 1er M Coupe / BMW Z4

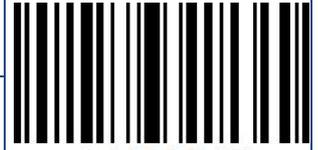

14109515

The product, described in this guide, has been produced and developed observing all necessary safety-requirements.

The product has to be installed adequate to avoid danger for persons and things and to insure a proper and save functionality. For this purpose you have to read the installationguide and the safety-instructions carefully.

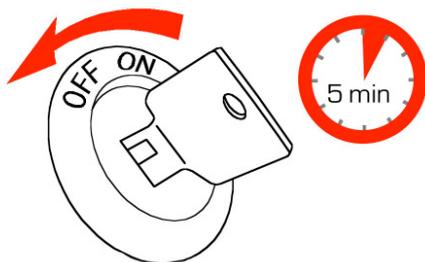


1. Open the hood.
2. Turn the ignition off before installing the tuning-kit!
3. Pull the ignition-key off!
4. Close and lock the doors!
5. Do not open the doors while installing the tuning-kit!
6. Wait 5 minutes before installing the tuningkit




Before installing the tuningkit take measures for electrostatic discharge to avoid damage off electro-nical car-parts. Install the electronic at a waterproof and vibrationless place. Do not make any changes to the tuning-kit (e.g. shortening the loom).

INSTALLATIONGUIDE

BMW 1er M Coupe / BMW Z4

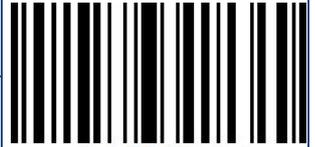

14109515

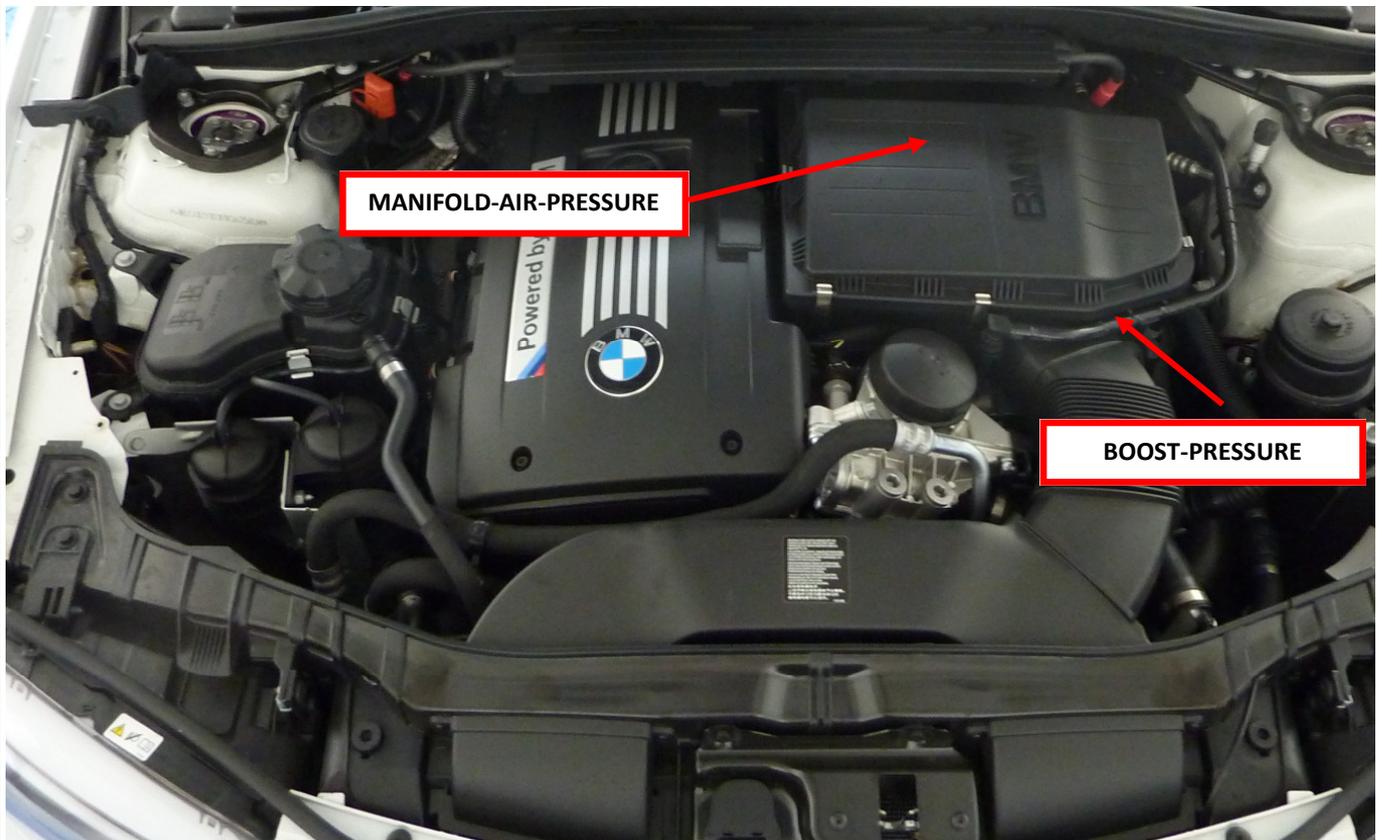

Overview:

The tuningkit has to be installed to this sensors:

- Boost pressure sensor (located under the air filter box)
- Manifold-air-pressure (located under the air filter box)

Needed tools:

- none

Preperation:

- Install the cable near to the sensors
- Take the tools (if needed) near by
- Take the fastening set near by

INSTALLATIONGUIDE

BMW 1er M Coupe / BMW Z4



14109515

Preperation



-To locate the sensors, the air filter box has to be removed

-Open the air filter box cover to unlock the clamp of the air filter box.

-Afterwards remove carefully the are filter box

Connect to the manifold-air-pressure



-Disconnect the original manifold-air-pressure-plug from the sensor.

-Connect the plug from the new loom with the manifold-air-pressure-sensor.

-Connect the original plug to the new loom.


INSTALLATIONGUIDE

BMW 1er M Coupe / BMW Z4




14109515

Connect to the boost pressure-sensor

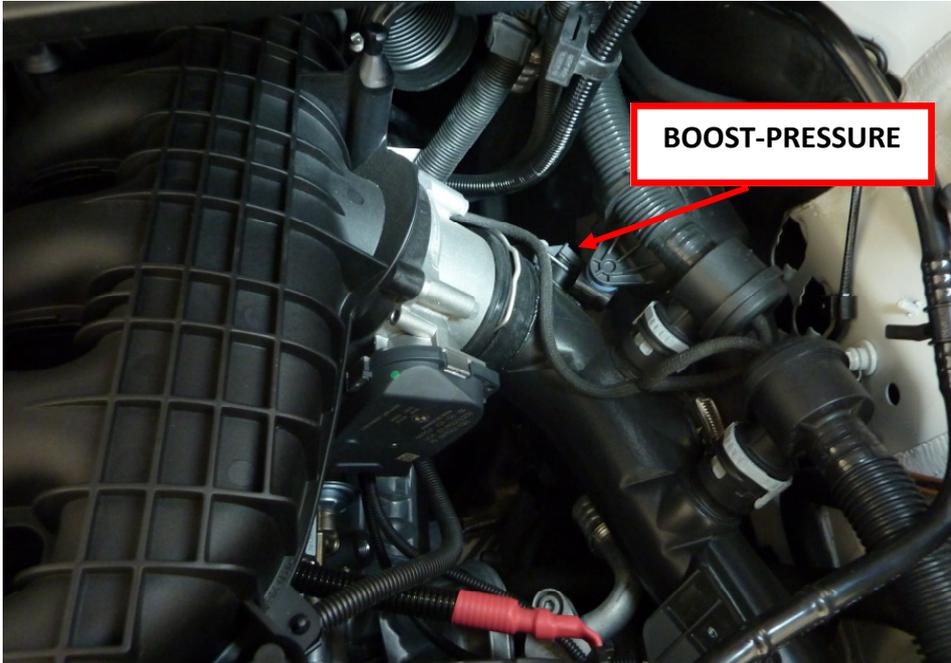

-Disconnect the original boost-pressure-plug from the sensor.

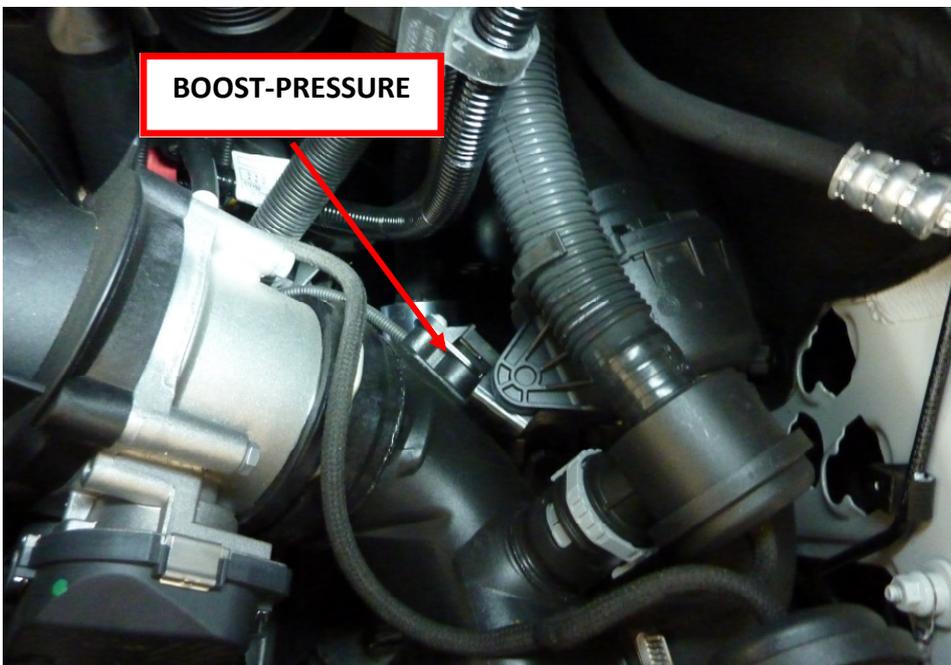

-Connect the plug from the new loom with the boost-pressure-sensor.
-Connect the original plug to the new loom.


INSTALLATIONGUIDE

BMW 1er M Coupe / BMW Z4



14109515

Connect the tuningbox

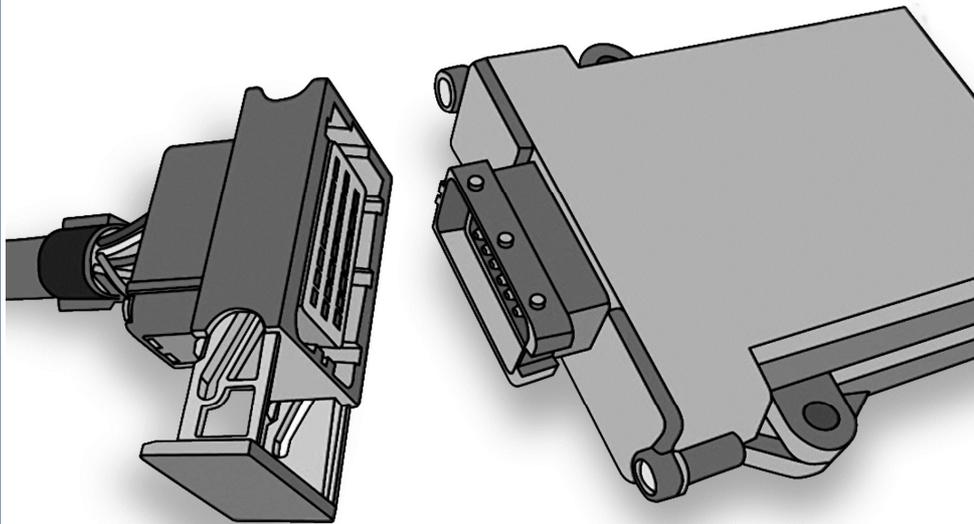

-Install the loom at a proper position.

- Fix the loom with cable-strips.

-Finally connect the new loom to the tuningbox.